

# Tek Partner Universal Remote Control

## User's Manual

### BW-0561-RD

Your Tek Partner Universal Remote Control is a state of the art device that integrates many different infrared (IR) remote controls into one. The Tek Partner is pre-programmed at the factory so all you need to do is follow the instructions in this manual and you will be ready to go! The Tek Partner replaces up to 4 separate remote controls to operate your television (TV), video cassette recorder (VCR), digital video disc (DVD) and cable box or satellite receiver (CBL/SAT). Once programmed, the Tek Partner functions just like your original remote control. Just aim the Tek Partner at your device and press the desired functions. It's that easy! In addition, the Tek Partner has large, soft buttons that illuminate bright red when they are pressed. No other remote control is as user friendly as the Tek Partner.

#### Specifications

**Operating System:** Pre-programmed infrared (IR) remote control.

**Compatibility:** Replaces most brands of IR remote controls for TVs, VCRs, DVDs, Cable Boxes and Satellite Receivers.

**Power Requirements:** 4 AA size batteries (not included).

**Size:** 8-1/2" x 5-1/2" x 2-1/2" (LxWxH)

**NOTE:** The Tek Partner is not compatible with radio frequency (RF) devices or digital converter boxes.

#### Table of Contents

Introduction.....	1
Specifications.....	1
Setup.....	2
Programming.....	2
Power Scan.....	2-3
ID Recall.....	3
Volume Punch Through.....	3-4
Master Power.....	4
Menu Mode.....	4
Frequently Asked Questions.....	5
Care & Maintenance.....	5
Device Codes.....	6-9
Function Table.....	10

BW-0561-RD  
0813

Visit our website at:  
[www.bigbuttonremotes.com](http://www.bigbuttonremotes.com)

Bay Products, L.L.C.  
803 West Alfred Street  
Tampa, FL 33603-5405  
Tel: (813) 871-0389  
Fax: (888) 260-5370

## **Setup**

1. Remove the battery cover from the back of the remote control.
2. Insert 4 new AA batteries.
  - a. Make sure the polarity of the batteries matches the diagram inside the battery compartment (- matches with - and + matches with +).
3. Push the battery cover back into place.

## **Programming**

MODE (3 seconds) → digit → digit → digit

1. Make sure you are in front of the device you want to program with the power turned on.
2. Using Device Codes (see pages 6-9), locate the brand name of your device.

NOTE: All codes are 3 digits and there may be more than 1 code listed for your device.

3. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
4. As soon as the indicator light begins to blink, release the MODE button.
5. On the remote control, enter the 3 digit code for your device found in Device Codes.
6. Try different functions on the remote control to make sure the correct code was entered.
  - a. If only some or none of the functions work, repeat the steps above and try the next code located in Device Codes. If there are no more codes listed, try Power Scan.

## **Power Scan**

MODE (3 seconds) → PWR → ▲ (PLAY) → ENTER (SELECT)

The Power Scan function checks every pre-programmed code in the remote control. Use Power Scan if:

- A. Your device is not listed in Device Codes.  
or
  - B. You cannot program the remote control using codes located in Device Codes.
1. Make sure you are in front of the device you want to program with the power turned on.

2. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
3. As soon as the indicator light begins to blink, release the MODE button.
4. On the remote control, press and release the PWR button.
5. On the remote control, slowly press and release the ▲ (PLAY) button until the device (TV, VCR, DVD or CBL/SAT) powers off.
  - a. Each time you press the ▲ (PLAY) button, the remote control is checking the next code and trying to turn off the device.
6. As soon as the device powers off, press and release the ENTER (SELECT) button on the remote control.
  - a. Make sure that you do not press the ▲ (PLAY) button after the device powers off. If you do this, the remote control will move to the next code. When you press the ENTER (SELECT) button, the code is programmed into the remote control.
7. Try different functions on the remote control to make sure it is programmed properly.
  - a. If only some or none of the functions work, repeat the steps above.

**NOTE:** Be patient, there are dozens of codes for each type of device.

### **ID Recall**

**MODE (3 seconds) → MENU/PREV. CH (RECALL)**

The ID Recall function will show you the code for any programmed device.

1. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
2. As soon as the indicator light begins to blink, release the MODE button.
3. On the remote control, press and release the MENU/PREV. CH (RECALL) button.
4. As soon as you release the MENU/PREV. CH (RECALL) button, the indicator light in the upper left hand corner will show you the code for your device by blinking the 100's, 10's and 1's of your code.
5. Count the number of blinks to determine the code. A '0' in any location is represented by a fast flicker.

**Example:** Code 102 is shown as BLINK <pause> FLICKER <pause> BLINK, BLINK.

### **Volume Punch Through**

**CBL/SAT (3 seconds) → CBL/SAT (hold) → TV**

The Volume Punch Through function allows you to change the volume on your TV while in CBL/SAT mode.

1. Make sure that you program the remote control for your TV and Cable Box/Satellite Receiver.
2. On the remote control, press and hold the CBL/SAT button until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
3. As soon as the indicator light begins to blink, release the CBL/SAT button.
4. On the remote control, press and hold the CBL/SAT button and then press the TV button (while holding the CBL/SAT button) and then release both buttons.

### Master Power

MODE (3 seconds) → PWR → PWR

The Master Power function allows you to turn the power on or off for all programmed devices at the same time.

1. Make sure that you program the remote control for all of your devices.
2. Turn on all of your devices.
3. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
4. As soon as the indicator light begins to blink, release the MODE button.
5. On the remote control, press and release the PWR button.
6. Again, on the remote control, press and release the PWR button.
7. To disable Master Power, repeat the steps above.

### Menu Mode

The Menu Mode allows you to use the blue arrow buttons (▲, ▼, ◀, ▶) to navigate a programmed device.

1. Make sure that the device you want to use has been programmed into the remote control.
2. Press and release the MENU/PREV. CH (RECALL) button.
  - a. In Menu Mode, use arrow buttons (▲, ▼, ◀, ▶) to navigate.
  - b. Once the desired menu item is reached, press and release the ENTER (SELECT) button to select it.

NOTE: If any button other than ▲, ▼, ◀, ▶ or ENTER (SELECT) is pressed or if no buttons are pressed within 20 seconds, the remote control will exit Menu Mode.

## **Frequently Asked Questions**

### ***Q. Why won't my Tek Partner work?***

A. Make sure you have fresh batteries and that they are installed correctly (see Setup on Page 2). If this does not solve the problem, please call (813) 871-0389 for technical support. We are more than happy to help you.

### ***Q. How do I know which code will work for my device?***

A. Look up the brand name of your device in Device Codes (see Pages 6-9). Each code is 3 digits. Enter one code at a time and test the remote control after each code is entered until you have one that controls all the functions properly. If you do not find a code to match your brand, proceed to Power Scan (see Pages 2-3).

### ***Q. I want my devices to come on all at the same time, what do I do?***

A. Program each of your devices separately and make sure they are all functioning properly. Once they are all programmed, power on all devices. Hold down the device button (TV, VCR, DVD or CBL/SAT) until the indicator light starts to blink, release the device button and press and release the PWR button twice. Repeat for each device (TV, VCR, CBL/SAT or DVD). Master Power should now be enabled. To disable Master Power just repeat the process again (see Master Power on Page 4).

### ***Q. I used the Power Scan option to find a code for my device. How do I know what the code is?***

A. Please follow the instructions on Page 3 for ID Recall.

### ***Q. I cannot get my volume to work on my satellite receiver or cable box, what should I do?***

A. You need to set up Volume Punch Through. See the instructions on Pages 3-4.

## **Care & Maintenance**

1. Do not expose the remote control to direct sunlight, extreme high or low temperatures, liquids or mechanical shock.
2. Do not mix old and new batteries as old batteries have a tendency to leak.
3. Do not use corrosive or abrasive cleaners on the remote control.
4. Do not disassemble the remote control as it contains no user serviceable parts.
5. To keep the remote control clean, periodically wipe it with a dry, soft cloth.

**TV CODES**

ACER 131  
 AOMIRAL 069, 192  
 AOVENT 159, 241  
 AIWA 126  
 AKAI 001, 006, 014, 020, 042, 052, 098, 160, 216  
 AKURA 361, 362, 363, 364  
 AMPRO 070  
 ANAM 045, 055, 057, 076, 095, 106, 109, 112  
 AOC 001, 132, 135  
 APEX 164, 216, 365  
 AUOIOVOX 087, 165  
 BELL&HOWELL 069  
 BENQ 309, 310  
 BLU:SENS 166, 169, 171  
 BROKSONIC 091, 255  
 CANOLE 001, 002, 003  
 CENTURION 038, 170  
 CETRONIC 045  
 CITIZEN 001, 002, 003, 045, 092  
 CLASSIC 045  
 COBY 311  
 CONTEC 045  
 CORANOO 172  
 CRAIG 045, 055, 157  
 CROWN 045  
 CURTIS MATHES 001, 092, 123, 128  
 CXC 045  
 OAEWOO 022, 023, 045, 046, 056, 068, 102, 108, 111, 114, 116, 118, 119, 127  
 OELL 330  
 OIBOSS 174  
 OISH NETWORK 176  
 OYNASTY 045  
 OYNATECH 063  
 OYNEK 083, 129, 185, 312  
 ELECTROGRAPH 187  
 ELECTROHOME 167  
 ELEMENT 313  
 EMERSON 001, 029, 033, 045, 048, 049, 091, 094, 139, 141, 157, 162, 214, 314, 315  
 ENVISION 001  
 EPSON 188  
 FISHER 058  
 FUJITSU 331, 332, 333

**TV CODES**

FUNAI 033, 045, 193  
 FUTURETECH 045  
 GATEWAY 017, 195, 196  
 GE 001, 015, 021, 057, 070, 121, 133, 141, 145, 163, 199  
 GOLOSTAR (LG) 043, 066, 067, 101, 104, 105, 110, 113, 118  
 GRAOIENTE 238  
 GRUNOIG 334, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360  
 GVA 316  
 HAJER 197, 317  
 HARMAN KARDON 201  
 HISENSE 148, 200, 318, 319  
 HITACHI 001, 015, 016, 018, 029, 072, 147, 204, 207, 226  
 HP 203, 336  
 HUMAX 337  
 HY-TEK 093  
 HYUNOAI 115, 208  
 ILO 082, 103  
 INFINITY 247  
 INKEL 120  
 INSIGNIA 050, 152, 312  
 JBL 247  
 JCPENNY 001, 015, 035, 092, 145  
 JENSEN 019  
 JVC 040, 079, 251  
 KAWASHO 173  
 KEC 045  
 KENWOOD 001  
 KLEGG 209  
 KLH 075  
 KLOSS 002, 060  
 KNOLL SYSTEMS 338  
 KONKA 339  
 KTV 001, 045, 162, 248  
 LG (GOLOSTAR) 043, 066, 067, 101, 104, 105, 110, 113, 118  
 LLOYTRON 172, 173  
 LOOGENET 069  
 LOEWEN 211, 247  
 LOGIK 069  
 LXI 145, 247  
 MAGNASONIC 089  
 MAGNAVOK 001, 003, 005, 010, 030, 041, 059, 060, 061, 064, 065,

**TV CODES**

118, 122, 145, 210, 225, 247, 321  
 MAJESTIC 069  
 MARANTZ 001, 167, 247  
 MAXENT 196  
 MEMOREK 053, 069  
 MGA 001, 033, 167  
 MIOLANO 199  
 MINTEK 213  
 MISAKI 193  
 MITSUBISHI 001, 011, 033, 039, 100, 154, 160, 167, 168  
 MOTOROLA 237  
 MTC 001  
 NAO 031  
 NATIONAL 177, 178, 179, 180, 181, 182  
 NEC 001, 022, 025, 042, 057, 084, 121, 125  
 NIKEI 045  
 OLEVIA 077  
 ONKING 045  
 ONWA 045  
 OPTIMUS 031  
 OPTOMA 218  
 OPTONICA 025  
 ORION 091, 219  
 PANASONIC 008, 051, 057, 076, 149, 247, 248, 249, 250, 252  
 PENNEY 199  
 PHILCO 001, 003, 045, 057, 060, 061, 064, 065, 118  
 PHILIPS 001, 003, 040, 060, 088, 130, 145, 231, 232, 233, 234, 235, 236, 247  
 PIONEER 001, 024, 029, 031, 032  
 POLAROID 071, 073, 074, 075, 078  
 PORTLAND 220  
 PROSCAN 133, 195  
 PROTON 081  
 QUASAR 034, 057, 227, 232, 248  
 RADIO SHACK 025, 043, 045, 048, 118, 163, 198  
 RCA 001, 007, 029, 057, 130, 133, 145, 155, 161, 163, 176, 199, 205, 206, 222  
 REALISTIC 025, 043, 045, 048, 163  
 RUNCO 186, 223  
 SAA 183  
 SAMPO 001

**TV CODES**

SAMSUNG 001, 044, 085, 092, 096,  
104, 118, 124, 134, 136, 145, 156  
SANSUI 091  
SANYO 026, 037, 038, 054, 058, 137  
SCEPTRE 224, 366  
SCOTT 033, 045, 049  
SEARS 033, 035, 058, 092, 145  
SELECO 340  
SHARP 025, 028, 033, 138, 154, 253  
SHERWOOD 228  
SIGNATURE 069  
SOLE 229, 341  
SONY 004, 012, 117, 140, 194, 230,  
245  
SOUNDESIGN 003, 033, 045  
SSS 045  
SUPERSCAN 193  
SUPREMACY 002  
SYLVANIA 001, 003, 009, 027, 060,  
061, 064, 065, 107, 118, 142, 145,  
146, 150, 153, 240, 247, 254, 323  
SYMPHONIC 184, 193  
SYNTAX OLEVIA 077  
TATUNG 057, 063  
TCL 243  
TEAC 143, 325  
TECHNICS 080  
TEKNIKA 001, 002, 003, 033, 036,  
045, 069, 092, 167  
TELEFUNKEN 047  
TELERENT 069  
THOMSON 190, 191  
TOSHIBA 013, 035, 042, 063, 092,  
144, 158, 202, 246  
TRUTECH 099  
UNIVERSAL 015  
VIDEO CONCEPTS 160  
VIOIKRON 244, 342  
VIEWSONIC 086, 301, 343, 344  
VIORE 302, 326  
VITO 303  
VIZIO 062, 066, 097, 327  
WAROS 015, 025, 033, 061, 064,  
065, 069, 247  
WHITE WESTINGHOUSE 151, 347, 348  
WINBOOK 305  
YAMAHA 001, 306, 307

**TV CODES**

YUPITERU 045  
ZENITH 069, 070, 090, 308  
**VCR CODES**  
AIWA 040  
AKAI 022, 048, 050, 109  
AMPRO 076  
AMSTRA 133  
ANAM 037, 039, 089  
ASA 134  
AUDIO DYNAMICS 018, 029, 044,  
048  
BROKSONIC 005, 041, 043, 110,  
166  
CANOLE 134  
CANON 037, 039, 140  
CAPEHART 094  
CITIZEN 134  
CRAIG 003, 116  
CURTIS MATHES 037, 039  
OAEWO 012, 014, 094, 096, 098,  
102  
OAYTRON 094  
OBX 018, 029, 044, 048  
OUAL 136  
OYNATECH 040, 057  
ELECTROHOME 063  
EMERSON 033, 037, 040, 041, 042,  
043, 050, 110, 112, 171, 182, 183,  
184, 191, 193, 195  
FERGUSON 136  
FINLUX 133  
FISHER 003, 016, 142  
FUNAI 040, 133  
GE 037, 039, 067, 076, 093, 095,  
124, 127  
GOLOSTAR 011, 018, 092, 100, 107  
GOVIOE 113, 117  
GRAETZ 136  
HARMAN KAROON 018, 049  
HITACHI 011, 040, 048, 067  
INSTANTREPLAY 037, 039  
ITT 136  
JCL 037, 039  
JCPENNY 011, 018, 039  
JENSEN 048

**VCR CODES**

JVC 018, 037, 039, 048, 052, 054,  
059, 111, 132  
KENWOOD 020, 044, 048, 052  
LLOYD 040  
LXI 011, 020, 040  
MAGNAVOX 007, 008, 035, 036,  
037, 039, 040, 072,  
MARANTZ 018, 037, 039, 073  
MATSUI 033  
MEI 037, 039  
MEMOREX 003, 020, 037, 039, 040,  
057, 076, 115  
MGA 049, 050, 063  
MINOLTA 011  
MITSUBISHI 011, 026, 032, 049, 050,  
055, 063, 065, 131, 145, 146  
MOTOROLA 196, 197  
MTC 133  
MULTITECH 030, 040  
NAO 139  
NATIONAL 140  
NEC 018, 029, 044, 048, 052  
NOROMENOE 048  
OPTIMUS 057  
OPTONICA 057  
ORION 005, 166  
PANASONIC 017, 024, 037, 078, 150,  
167, 173, 176, 188, 189, 201, 203, 206  
PENTAX 011, 026, 037, 039, 067  
PHILCO 037, 039, 040  
PHILIPS 037, 039, 040, 075  
PIONEER 011, 018, 027, 052  
PORTLAND 094  
PROSCAN 121  
PULSAR 076  
QUARTZ 002, 020  
QUASAR 039, 167  
RADIO SHACK 003, 020, 057, 093,  
133, 134, 140, 142, 160, 167  
RCA 006, 011, 026, 039, 066, 067,  
093, 095, 124, 127  
REALISTIC 003, 020, 037, 039, 040,  
057, 093, 142, 160  
SABA 136  
SALORA 020  
SAMSUNG 004, 009, 028, 038, 090,  
091, 093, 095, 098, 106, 109, 207

**VCR CODES**

SANSUI 005, 048, 052, 116, 166  
 SANYO 003, 014, 020, 115  
 SCHAUB LORENZ 136  
 SCOTT 043, 098, 110, 112  
 SEARS 003, 011, 016 020, 026, 037, 142  
 SHARP 010, 019, 037, 156, 196, 205  
 SHINTOM 030  
 SONY 003, 015, 016, 021, 037, 056, 060, 061, 082, 187, 196, 199, 202  
 SOUNOESIGN 040  
 STS 011  
 SYLVANIA 001, 037, 039, 040, 063, 200, 208  
 SYMPHONIC 040  
 TANOY 040  
 TASHICO 134  
 TATUNG 044, 048  
 TEAC 040, 044, 048  
 TECHNICS 037, 039  
 TEKNIKA 037, 039, 040  
 TELEFUNKEN 136  
 THOMAS 040  
 THOMSON 136  
 THORN 136  
 TOSHIBA 004, 011, 013, 023, 025, 051, 063, 085, 098, 112, 142, 174, 185, 193, 195, 198  
 VECTOR RESEARCH 018  
 VICTOR 052  
 VIDEO CONCEPTS 018, 040, 050  
 WARDS 003, 011, 030, 037, 039, 040, 057, 058, 112  
 YAMAHA 018, 040, 044, 048  
 ZENITH 005, 040, 052, 060, 076

**CBL CODES**

ABC 001, 003, 045, 048, 052, 059, 130  
 AOB 089  
 ALLEGRO 111  
 AMERICAST 212  
 AMINO 067  
 ANTRONIX 021  
 ARCHER 012, 014, 021, 031, 112  
 BELCOR 113  
 CABLE STAR 033, 113

**CBL CODES**

CENTURION 092  
 CENTURY 014  
 CISCO 051, 060, 078  
 CITIZEN 014, 111  
 COLOUR VOICE 090  
 COMCAST 026, 032  
 COMTRONICS 037  
 CONTEC 228  
 DIAMOND 030  
 DIGI 114  
 EAGLE 027, 037, 046, 186  
 EASTERN 063, 066, 070, 115  
 ECHOSTAR 011  
 ELECTRICORD 039  
 EMERSON 112  
 FOXTTEL 038  
 GC ELETRONICS 113  
 GE 009, 076  
 GEMINI 015  
 GENERAL 210  
 GENERAL INSTRUMENT 032, 226, 227  
 G.I. 001, 003, 015, 017, 096, 097, 141  
 GOLDEN CHANNEL 037  
 GOLO STAR 224  
 GOODMIND 112  
 HAMLIN 055, 056, 061, 099, 100, 101, 117, 152, 175, 207, 208  
 HITACHI 001, 061  
 HOSPITALITY 074, 080  
 JASCO 111  
 JERROLD 001, 002, 003, 007, 015, 016, 017, 073, 096, 097, 140, 141, 162, 166, 167, 210  
 MACOM 040, 191  
 MAGNAVOX 017, 019, 068, 082  
 MEMOREX 058  
 MOTOROLA 004, 005, 006, 043, 049, 060, 064, 069, 077, 215, 216  
 MOVIE TIME 039  
 NSC 044, 075, 190  
 OAK 023, 043, 059, 196, 197, 223  
 PACE 029, 078, 079, 083, 084, 086, 087, 088  
 PANASONIC 050, 053, 155, 176, 177, 189, 214, 225

**CBL CODES**

PANTHER 114  
 PARAGON 058  
 PHILIPS 013, 019, 020, 027, 085, 090  
 PIONEER 001, 041, 057, 119, 147, 148, 171, 209, 217, 219, 224  
 POST NEWS WEEK 023  
 PRIMESTAR 162  
 PTS 018, 054, 075, 076  
 PULSAR 058  
 OUASAR 058  
 QUEST 035  
 RADIO SHACK 111, 112, 213  
 RCA 053, 214  
 REALISTIC 012  
 REGAL 055, 056, 061, 099, 100, 101, 158, 207  
 REGENCY 063, 115  
 RUNCO 058  
 SAMSUNG 008, 037, 072, 186, 224  
 SCIENTIFIC ATLANTA 003, 018, 022, 047, 048, 052, 079, 130, 145, 159, 160, 183, 203, 204  
 SIGNAL 037  
 SIGNATURE 001  
 SL MARX 037  
 SONY 098, 229, 231  
 SPRUCER 053, 081, 177, 189  
 STARCOM 002, 015, 016, 141, 163  
 STARGATE 015, 037  
 SYLVANIA 071  
 TADIRAN 037  
 TANOY 024  
 TELECAPATION 028  
 TEXSCAN 036, 071  
 TIMELESS 123  
 TOCOM 045, 046, 062, 170, 205  
 TOSHIBA 058  
 UNIKA 014, 021, 031  
 UNITEO CABLE 059  
 UNIVERSAL 012, 014, 021, 031, 033, 034, 039, 042, 113  
 VENTURER 010  
 VIDEOWAY 124  
 VIEWSTAR 019, 025, 190  
 ZENITH 058, 065, 098, 212, 222



**SAT CODES**

ALHASTAR OSR 422  
 CANAL 399  
 CANAL+ 399  
 CHANNEL MASTER 317, 320, 321, 361  
 CHAPARRAL 315, 316, 451  
 DIRECTV 312, 360  
 OISH NETWORK 401  
 ORAKE 317, 318, 413  
 OX ANTENNA 331, 352, 369  
 ECHOSTAR 475  
 ECHOSTAR 309, 319, 322, 380, 395, 396, 400, 401, 406, 410, 463, 467, 475, 477, 483, 484, 490, 493  
 ELECTRO HOME 392  
 FOXTEL 397  
 FUJITSU 334  
 GENERAL ELECTRIC 474  
 GENERAL INSTRUMENT 301, 303, 311, 323, 365, 403, 454, 468  
 GRUNOIG 393  
 HITACHI 372  
 HITACHI OBS 455  
 HOUSTON TRACKER 463, 467  
 HUGHES 306, 314, 385, 455, 480, 485, 488  
 HUMAX 388  
 JANIEL 366  
 JERROLO 367, 454, 464, 468  
 JERROLO PRIMESTAR 456  
 KCPI 408  
 LEGENO 453  
 MACOM 317, 365, 370, 371  
 MAGNAVOX 473  
 MEMOREX 453  
 MITSUBISHI 372  
 MOTOROLA 402  
 NEXTWAVE 423  
 NORSAT 374  
 OPTIMUS 466  
 PAC OSS 478  
 PACE 328, 329, 336, 337, 338, 340, 342, 343, 344, 345, 346, 347, 356, 357, 363, 386  
 PANASONIC 366, 469  
 PANASONIC OBS 457

**SAT CODES**

PHILIPS 305, 375, 480, 485, 487, 488, 492, 494  
 PREMIERE 376  
 PRESIOENT 381, 404  
 PRIMESTAR 412, 454, 464  
 RCA 307, 308, 310, 379, 465, 474, 481, 482, 491  
 RCA OSS 458, 476  
 REALISTIC 325, 349, 377  
 SAMSUNG 313, 359, 362, 368, 373, 422, 489  
 SATELLITE SERVICE CO 331, 335, 341, 353  
 SCIENTIFIC ATLANTA 339  
 SKY 363, 364  
 SONY 304, 405, 407, 486  
 STAR CHOICE OBS 459  
 SUPER GUIOE 327, 423  
 TEECOM 330, 333, 390, 391, 409  
 TOPFIELD 378  
 TOSHIBA 302, 426, 462, 470, 473  
 UEC 358  
 UNIOEN 323, 324, 325, 326, 332, 348, 349, 350, 351, 354, 355, 381, 382, 383, 389, 403, 466  
 VIASAT 398  
 ZENITH 371, 384, 387, 394, 419, 479

**DVO CODES**

APEX DIGITAL 056, 216, 233, 239  
 CALIFORNIA AUDIO 176  
 COBY 042, 048  
 CYBERHOME 001  
 QAEWO 246  
 OENON 150, 162, 201, 208  
 OVO-VIDEO 231  
 OYNEX 041  
 EMERSON 007  
 GE 196, 197  
 GO VIDEO 002  
 GRA OIENTE 228, 229  
 HARMAN KAROON 148, 149, 186, 220  
 HITACHI 193  
 INSIGNIA 029, 033, 045

**DVD CODES**

JVC 192, 199  
 KENWOOD 151, 183, 225  
 KLH 224  
 LG 046, 198, 211, 219, 226  
 LOTTE 152  
 MAGNAVOX 007, 017, 024, 028, 031, 051, 057, 169, 212, 234  
 MARANTZ 169, 214  
 MEMOREX 012  
 MITSUBISHI 172, 202  
 NAO 217  
 ONKYO 200, 207  
 OPTIMUS 153, 183  
 PACIFIC 018  
 PANASONIC 044, 163, 171, 179, 181, 184, 189, 203, 205, 238, 240, 243  
 PHILIPS 005, 169, 188, 212  
 PIONEER 154, 160, 174, 180, 221, 222  
 POLAROID 023  
 PROCEE 215  
 PROSCAN 173, 196, 197  
 RCA 159, 173, 196, 197, 232  
 RUNCO 165  
 SAMSUNG 002, 003, 016, 021, 025, 043, 050, 168, 195, 209, 210, 241, 244, 245  
 SANYO 004, 022, 155, 156, 182  
 SHARP 036, 037, 047, 161, 166, 183, 204, 230  
 SONY 013, 019, 038, 156, 167, 178, 187, 191, 206, 223, 232, 242  
 SYLVANIA 006, 020, 032, 034, 235  
 SYMPHONIC 027  
 TECHNICS 164  
 THOMPSON 196, 197  
 TIVO 008, 009, 010, 011, 014, 015  
 TOSHIBA 026, 035, 039, 040, 049, 169, 181, 185, 190, 200, 213, 227, 236  
 TRUTECH 030  
 YAMAHA 157, 158, 205, 218  
 ZENITH 169, 194, 198, 211, 219  
 ZENITH OIVX 175

Tek Partner Function Table					
Button Name	TV	VCR	DVD	CBL/SAT	
TV	TV MODE	TV MODE	TV MODE	TV MODE	
VCR	VCR MODE	VCR MODE	VCR MODE	VCR MODE	
DVD	DVD MODE	DVD MODE	DVD MODE	DVD MODE	
CBL/SAT	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE	
PWR	ON/OFF	ON/OFF	ON/OFF	ON/OFF	
0 - 9	0 - 9	0 - 9	0 - 9	0 - 9	
MENU/PREV. CH (RECALL)	LAST CHANNEL/RECALL	LAST CHANNEL/RECALL	OPEN/CLOSE	LAST CHANNEL/RECALL	
ENTER (SELECT)	ENTER	ENTER	ENTER	SELECT/ENTER	
TV/VCR (TV/SAT)	TV/VCR	TV/VCR	TV/DVD	TV/SAT	
MUTE (INFO/VIEW)	MUTE	MUTE	MUTE	INFO/VIEW	
CH +	CHANNEL UP	CHANNEL UP	SKIP +	CHANNEL UP	
CH -	CHANNEL DOWN	CHANNEL DOWN	SKIP -	CHANNEL DOWN	
STOP (EXIT)	STOP (VCR)	STOP	STOP/EXIT	EXIT	
PLAY (▲)	PLAY (VCR)	PLAY	PLAY	UP	
PAUSE (GUIDE)	PAUSE (VCR)	PAUSE	PAUSE	GUIDE	
REW (◀)	REWIND (VCR)	REWIND	REWIND	LEFT	
FF (▶)	FAST FORWARD (VCR)	FAST FORWARD	FAST FORWARD	DOWN	
REC (▶)	RECORD (VCR)	RECORD	RECORD	RIGHT	
VOL +	VOLUME UP	VOLUME UP	VOLUME UP	VOLUME UP	
VOL -	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN	